

W5ZU D-STAR

Radio memory group or “bank” settings for using W5ZU D-STAR repeater.

CH No	Frequency	Dup	Offset	Mode	Channel Name	UR	RPT1	RPT2	Notes
1	444.425	DUP+	5.0MHz	DV	W5ZU talk	CQCQCQ	W5ZU- B	W5ZU- G	Use to talk on the repeater
2	444.425	DUP+	5.0MHz	DV	W5ZU echo	-----E	W5ZU- B	W5ZU- G	Performs an echo test, the repeater will playback whatever it receives from you. Good tool for checking out if you are getting into the repeater.
3	444.425	DUP+	5.0MHz	DV	W5ZU status	-----I	W5ZU- B	W5ZU- G	Use to get the repeater status
4	444.425	DUP+	5.0MHz	DV	W5ZU unlink	-----U	W5ZU- B	W5ZU- G	Use to unlink repeater
5	444.425	DUP+	5.0MHz	DV	55A link	REF055AL	W5ZU- B	W5ZU- G	Link to Reflector 55 A module
6	444.425	DUP+	5.0MHz	DV	55B link	REF055BL	W5ZU- B	W5ZU- G	Link to Reflector 55 B module
7	444.425	DUP+	5.0MHz	DV	55C link	REF055CL	W5ZU- B	W5ZU- G	Link to Reflector 55 B module
8	444.425	DUP+	5.0MHz	DV	55D link	REF055DL	W5ZU- B	W5ZU- G	Link to Reflector 55 D module

Note: “-” represents the space character